


SONOS ERA 100 Wall Mount Installation Instructions

Assembly Diagram

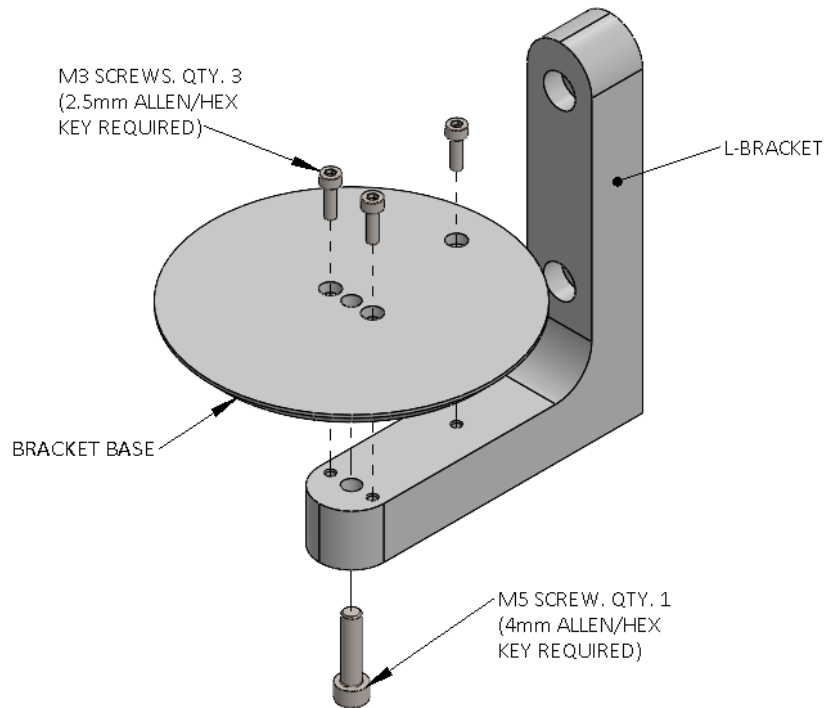

Contents

- Bracket Base x 1
- L-Bracket/Mount x 1
- M3 x 10 Machine Screw x 3
- M5 x 22 Machine Screw x 1
- Concrete/Brick/Plaster
 - 5mm x 50mm Woodscrew x 2
 - 6mm Red Rawl Plugs x 2
- Hollow Wall Plasterboard
 - M5 x 37mm Lg. Hollow Wall Anchor x 2

Installation Steps

1. Tools Required

- 2.5mm Allen/Hex key (optional at purchase)
- 4mm Allen/Hex key (optional at purchase)
- Philips/Pozi drive screwdriver.
- Power Drill
- Concrete/Brick/Plaster
 - 6mm Drill Bit
- Hollow Wall Plasterboard
 - 10mm Drill Bit

- Spirit Level

2. Bracket Assembly

- Align the **circular base/disc** with the **horizontal arm** of the **L-shaped wall bracket**.
- Secure the base to the bracket using **three M3 x 10 mm screws** (supplied).
- Tighten evenly, taken care not to over tighten.

3. Positioning

- Ensure wall is suitable for the speaker weight.
- Hold the assembled bracket against the wall at the desired location.
- Ensure speaker clearance and cable access.
- Use a spirit level to confirm horizontal alignment.

4. Marking

- Using a pencil or 5mm drill bit, mark the wall directly through the two mounting holes in the vertical arm of the bracket.
- Confirm alignment before proceeding.

5. Drilling

- Concrete/Brick/Plaster, drill two **6mm holes** around 50mm deep, taken care to not over drill.
- Hollow Wall Plasterboard, drill two 10mm holes through plasterboard, taken care to not over drill.

6. Wall Plug Insertion

- Concrete/Brick/Plaster
 - Insert the supplied **6mm red wall plugs** flush with the wall surface.
 - Do not hammer plugs into soft or brittle material.
 - Align the bracket holes with the wall holes/plugs.
 - Insert the **two 5mm wall screws** and tighten securely.
 - Do not overtighten—this may damage the bracket or wall surface.
- Hollow Wall Plasterboard
 - Fix both anchors to mounting holes on bracket.
 - Push anchors through wall holes, ensuring the anchors are pushed into wall sitting flush, then tighten to pull expand anchors to back of wall, and speaker bracket tight to wall.

7. Speaker Attachment

- Place the **Sonos ERA 100 speaker** onto the mounted bracket.
- From the underside, insert and tighten the **M5 screw** to secure the speaker to the circular base.
- Confirm that the speaker is stable and properly aligned. If speaker realignment is required, slacken the M5 screw on underside, and retighten after suitably aligned.
- Ensure power cable is clipped to wall or behind wall to prevent any entanglement.
- After 72hrs/3 days, check the M5 screw tightness again.