
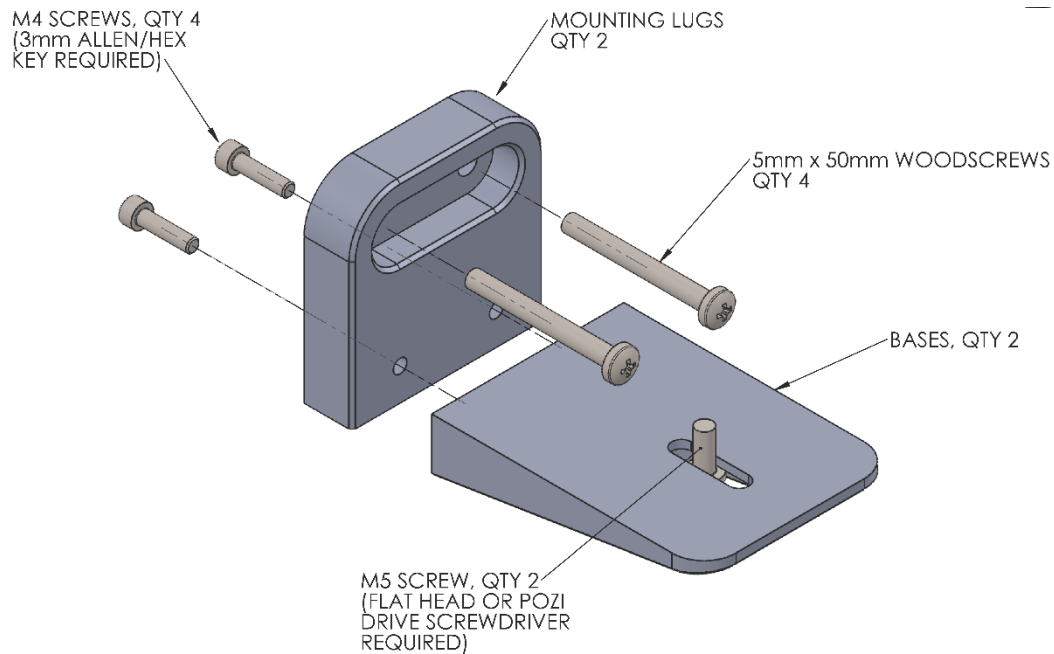


Bose Smart Soundbars 300/500/600/700/TV Wall Mount

Assembly Diagram

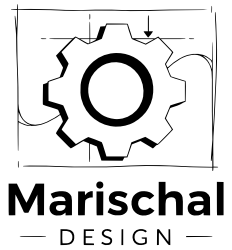

Contents

- Base x 2.
- Mounting Lug x 2.
- M4 x 16 Machine Screw x 4.
- M5 x 12 Machine Screw x 2.
- Concrete/Brick/Plaster
 - o 5mm x 50mm Woodscrew x 4
 - o 6mm Red Rawl Plugs x 4
- Hollow Wall Plasterboard
 - o M5 x 37mm Lg. Hollow Wall Anchor x 4

Installation Steps

1. Tools Required

- Tape Measure.
- 3mm Allen/Hex key.
- Philips & Flat Head Screwdriver.
- Power Drill.
- Concrete/Brick/Plaster

- o 6mm Drill Bit
- Hollow Wall Plasterboard
 - o 10mm Drill Bit
- Spirit Level.

2. Bracket Assembly

- Secure the mounting lugs to the bases using **four M4 x 16 mm screws**.
- Tighten firmly. Critical that lug and base facing are tight for structural strength.

3. Positioning

- Ensure wall is suitable for the speaker weight and an even surface.
- Measure the soundbar fixing holes centres, then deducted 60mm. This will be the distance to space the mounts/brackets between each other.
- Determine height, then use a spirit level to confirm horizontal alignment.
- Using 5.5mm drill bit, mark the wall directly through the two mounting holes in the mounting lugs.
- Avoid direct sunlight.

5. Drilling

- **Concrete/Brick/Plaster**, drill **two 6mm holes** around 50mm deep, taken care to not over drill.
- **Hollow Wall Plasterboard**, drill **two 10mm holes** through plasterboard, taken care to not over drill.

6. Wall Plug Insertion

- **Concrete/Brick/Plaster**
 - o Insert the supplied **6mm red wall plugs** flush with the wall surface.
 - o Do not hammer plugs into soft or brittle material.
 - o Align the bracket holes with the wall holes/plugs.
 - o Insert the **four 5mm wall screws** and tighten securely.
 - o Do not overtighten—this may damage the bracket or wall surface.
- **Hollow Wall Plasterboard**
 - o **Fix both anchors** to mounting holes on bracket, do not tighten.
 - o **Push anchors through wall holes**, ensuring the anchors are pushed into wall sitting flush, then **tighten** to pull expand anchors to back of wall, and speaker bracket tight to wall.

7. Speaker Attachment

- Place the **soundbar** onto the mount.
- From the underside, insert and tighten the **M5 screws** to secure the soundbar to the bases.